


# TB-529 Understanding EPC’s B Series SSI Encoders

*NOTE: This Technical Bulletin applies to **EPC Models A36SB, A36HB, A58SB, A58HB, and A25SB**. For Model A36R SSI information, refer to the Model A36R Technical Reference Manual.*

Synchronous Serial Interface, or SSI, is a simple serial communications protocol designed for data transfer between computers or user terminals and smart sensors.


Absolute encoders with SSI communication from Encoder Products Company are always slave devices. The fieldbus device is the master, supplying a clock signal to which the encoder responds synchronously. **The SSI Master must be configured to the correct data word length and clock rate.** The master must also be configured to display the correct data type (Gray or binary code) supplied by the encoder.

The SSI Master controls the data flow from the encoder data output by sending clock sequences to the encoder clock inputs. The encoder electronics respond to the first falling slope of the clock sequence by freezing the current position value and starting the serial output of the data bits. On every following rising clock edge from the master, one data bit is transmitted by the encoder.

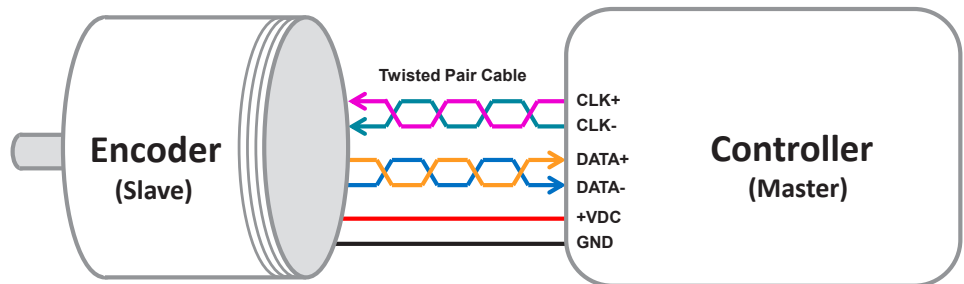


After the last falling edge of the clock, the encoder pulls the dataline low for a period of time called the pause time (**tp**). After **tp**, the encoder will pull the dataline back to its high idle state and will load its updated position data. During this time, the master must wait for **at least 30µs (tm)** to begin sending more clock signals. If clock signals are sent prematurely, the encoder will resend the previous data, and will not send updated data until **tm** has been met. This is called multi-path transmission. Multi-path transmission can be used to check data integrity by reading the data twice and verifying the data matches. However, the encoder will continue to send the same position data until **tm** has been met.

## Single SSI Data Transmission

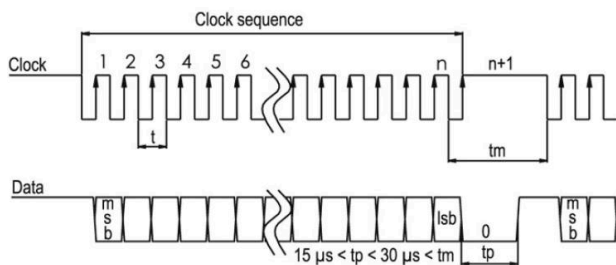

*Note: Slave device will resend the same data if tm is not met.*


## Multi-Path SSI Data Transmission

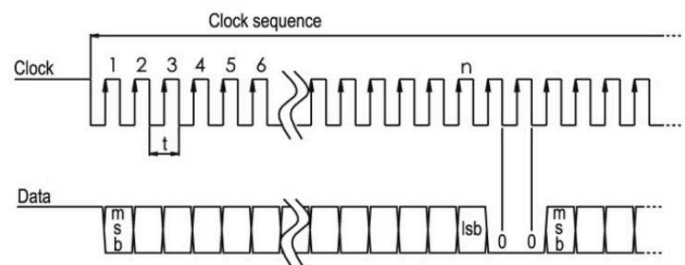


The encoder data bits are sent MSB to LSB, with multi-turn position bits sent first (if applicable), followed by single-turn position bits.

# TB-529 Understanding EPC's B Series SSI Encoders

## Multi-Turn Data Format

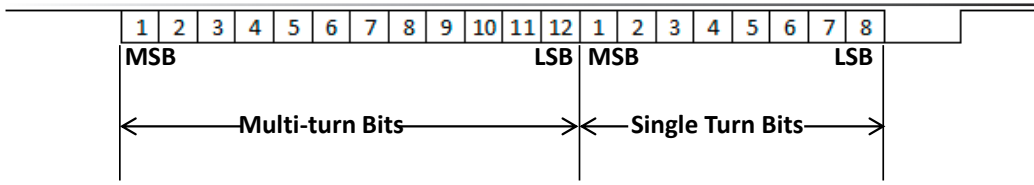

## Single Turn Data Format

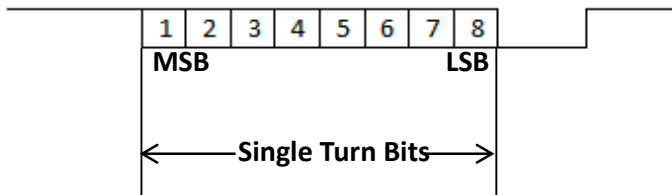

EPC's SSI absolute encoders have two additional functions: preset and direction.

The preset wire defines the current actual shaft position as zero position if it is set to the supply voltage level (VCC) for more than two seconds.

The direction wire defines the positive direction of counting when the shaft rotates.

The standard direction is defined as positive counting during CW rotation when viewed from the shaft end. In this case, the direction is connected to GND. By connecting the direction wire to the supply voltage, the direction of counting changes to CCW. Changing the counting direction requires a reset of the encoder and may require an additional preset.

Preset Wire	
VCC	Sets current position to zero
GND	No effect

Direction Wire	
VCC	CCW*
GND	CW*

\*Positive counting direction when viewed from shaft end

**NOTE: It is not recommended to leave preset or direction wires unconnected.**

## Maximum Data Transmission Rate

The standard EPC SSI encoder has a clock frequency limited to 500 kHz maximum. For those applications with SSI master clock frequencies greater than 500 kHz, EPC offers a special order encoder that can operate with clock rates up to 2 MHz. Please contact Customer Service if you would like to order this configuration.

Note that the maximum cable length usable in an SSI system is a function of clock frequency, the SSI master controller used, and

## TB-529 Understanding EPC's B Series SSI Encoders

the cable type and length (see table below). EPC recommends shielded twisted-pair cable with a known impedance. Termination to minimize signal reflections may be necessary at longer cable lengths.

Maximum Cable Length*	Clock Frequency (kHz)
4 m	< 2000
10 m	< 1400
25 m	< 900
50 m	< 500
100 m	< 250
200 m	= 100

\*For products with 5 VDC input voltage option, maximum cable length is 2 m.

### Noise Protection


Noise protection is extremely important for proper encoder operation, especially when data is being sent serially. The following tips will help increase noise protection:

- Using shielded twisted pair cable is HIGHLY recommended.
- It is extremely important that cable shields are connected to the receiver/instrument (counter, PLC, etc.) ground. When doing so, DO NOT connect the end near the encoder. Connecting the shield at both ends can cause ground loops.
- Always make sure the motor/machine for which the encoder is mounted is properly grounded.
- The encoder case should also be grounded with the following conditions:

*DO NOT ground the encoder case through both the motor/machine and the cable wiring.*

*DO NOT allow the encoder cable wiring to ground the motor/machine exclusively. High motor/machine ground currents could flow through the encoder wiring, potentially damaging the encoder and associated equipment.*

- Connecting cables should be kept away from power lines and other noise-generating equipment.
- Interference sources including motors, solenoid valves, and frequency converters should always have their noise suppressed at the source.
- Encoders should not be powered from the same main supply as solenoid valves or contactors, as this could likely cause interference.
- It may be necessary to install additional noise protection in certain applications.

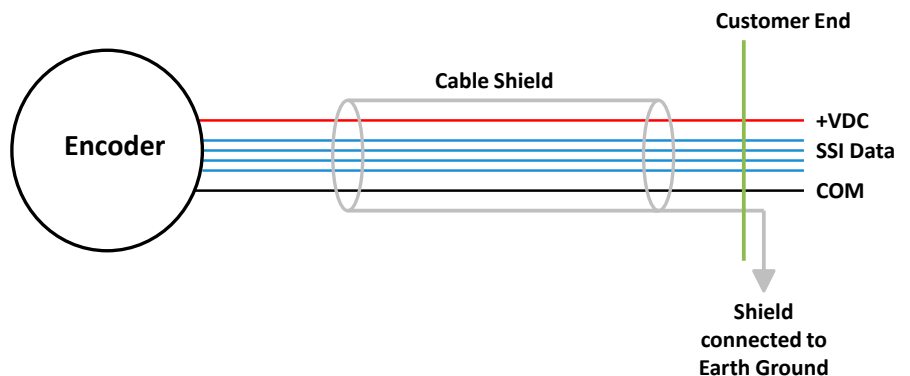

If you have additional questions, please contact Technical Services at 1-800-366-5412.