

TB-533 Installation of 90° Connector When Rotation Is Necessary

These installation instructions apply to all three 90° Connectors pictured below:



6-pin MS type




7-pin MS type



10-pin MS type


- 1 Before** rotating 90° Connector, loosen second Lock Ring.

Only loosen Lock Ring enough to allow easy movement. It is not necessary to disassemble Connector from Encoder.

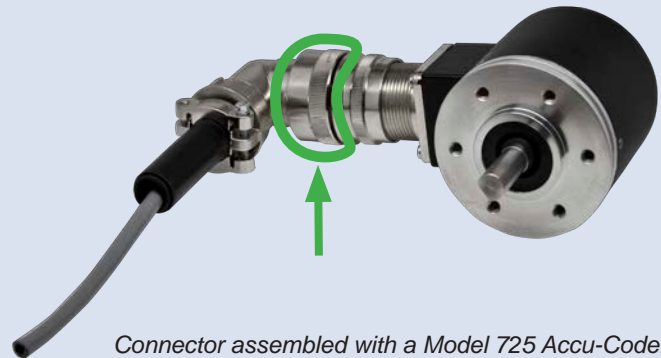

- 2 Failure to loosen Lock Ring will result in twisted wires and a damaged connection.**

NOTE: This photo is for demonstration purposes only; loosening the second Lock Ring will not expose the wires and the connection.

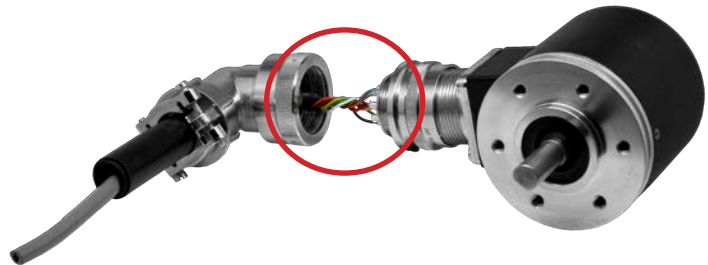

- 3 CAUTION:** Do not rotate 90° Connector more than 180° in either direction. Rotation past 180° will damage the connection.

ACCUCODER™
Encoder Products Company

Encoder Products Company
PO Box 249 • Sagle ID 83860

1-800-366-5412 • www.encoder.com • sales@encoder.com